

## Digital Knight Swing-Away Heat Press

### Power Cord Routing Recommendation

Make sure the modular removable power cord is fully seated up into the inlet socket – pushed firmly all the way into the inlet socket next to the ON/OFF switch.

If it is partially unseated, the screen may not turn on, or the wires/socket/ON-OFF switch may heat up.

We highly recommend making sure the power cord is tied/fastened/zip-tied/taped or otherwise wrapped to the back white swivel post so that when swinging the press there is **no direct tension or pulling or tugging/yanking on the power cord inlet socket connection**.

The easiest option to alleviate this is actually to simply drape the power cord up and over the white swing-away head right in front of the black pressure knob. Then, there is no pulling tension on the power cord inlet socket.