

Digital Knight Controller Programming

You must set your new controller for your specific model machine:

1. Turn the press OFF.
2. Hold both the UP & DOWN ARROW keys firmly while turning the press ON. <<Keep Holding>>
3. Once the screen shows “Clear Presets?” and “NO” flashing, let go of the arrow keys. Press PRG.
4. “MDL” displays on the top of the screen. “Skip” flashes on the bottom.
5. Use the UP ARROW key to select your model. If your model has more than 4-digits (ie: Maxi-3040, DK20SP, DK20-AUTO) – wait for the bottom display to scroll the full model number across the screen.
6. Once you see your specific model, press PRG. The press will reset all settings for that model.

Contact the factory at 800-525-6766 or info@heatpress.com if further assistance is needed.