

# Digital Knight Controller Programming

## **You must set your new controller for your specific model machine:**

1. Turn the press OFF.
2. Hold both the UP & DOWN ARROW keys firmly while turning the press ON. <<Keep Holding>>
3. Once the screen shows “Clear Presets?” or something similar, let go of the arrow keys.
4. Press PRG. “MDL” displays on the top of the screen. “Skip” flashes on the bottom.
5. Use the UP ARROW key to select your model. If your model has more than 4-digits (ie: Maxi-3040, DK20S, DK20SP, DK20-AUTO) – make sure the extra digits scroll by, or press UP again.
6. Once you see your specific model, press PRG. The press will reset all settings for that model.

Contact the factory at 800-525-6766 or [info@heatpress.com](mailto:info@heatpress.com) if further assistance is needed.