

# JetPress 12 Thermostat Replacement Instructions

Here's the basic steps for changing the thermostat on your heat press:

1. Take the clamp/handle assembly and heater OFF the Purple frame.
2. Do this by removing the 4 screws that hold the handle/clamp assembly onto the purple arm.
3. Swing the purple arm out of the way – the heater and clamp are resting on the rubber pad now.
4. Remove the handle/clamp assembly from the middle of the heater.
5. Do this by loosening the one NUT that is tightened against the BOTTOM of the SILVER POST that opens and closes the press.
6. You'll need to hold the clamp, and turn the very tight nut with a wrench.
7. Remove the clamp assembly from the middle of the heater by rotating it and unscrewing it from the middle threaded post of the heater.
8. THEN – you can remove the CENTER NUT holding the cover on top of the heater.
9. Then you will be able to look inside the heat platen, and replace the adjustable thermostat.
10. Unscrew the old wires from the old thermostat, and attach them to the new thermostat one at a time.
11. Take the old thermostat off, and put the new one on.
12. Reverse these instructions to put the press back together!